

# REC60 SERIES

High Voltage Contactors

**PRELIMINARY**

**600A** CONTINUOUS DUTY

**900V** SYSTEM VOLTAGE

## FEATURES

### SPST Normally Open High Voltage Contactors


- Hermetic seal with gas fill
- Auxiliary contacts – for main position feedback
- Integrated coil economizer to reduce coil holding power
- Meets RoHS 2011/65/EU



**PERFORMANCE**

TABLE 1. SPECIFICATIONS	
CHARACTERISTIC	MEASURE
Contact Arrangement	Form X, SPST NO
Max Switching Voltage	900 VDC
Dielectric Withstand Voltage Across Open Contacts	3,500 VAC, 1 minute 3,500 VDC, 1 minute
Continuous Current (250mm <sup>2</sup> conductor)	600A
Overload Current	90 seconds 1,000A 30 seconds 2,000A
Make and Break	See table
Min Insulation Resistance	1,000 Mohm @ 1,000V
Contact Voltage Drop (Max)	50mV @ 100A
Operate Time (Max, incl bounce)	40ms
Release Time (Max)	12ms
Shock - Functional, 1/2 Sine, 11ms	20G
Shock - Destructive, 1/2 Sine, 11ms	50G
Operating Temperature	-40°C to 85°C
Ingress Protection	Exceeds IP69, (Hermetically sealed)
Mechanical life	200,000
AUXILIARY CONTACTS	MEASURE
Contact Arrangement	SPST
Continuous Current	3A
Minimum Current	100mA @ 8V
COIL	MEASURE
Nominal Voltage	24 VDC
Pick-up Voltage (Max)	18 VDC
Drop-out Voltage (Min)	12 VDC
Inrush Current (Max)	0.55A
Holding Current	0.13A @ 24 VDC

Continuous Carry @ 85C (325mm<sup>2</sup>)

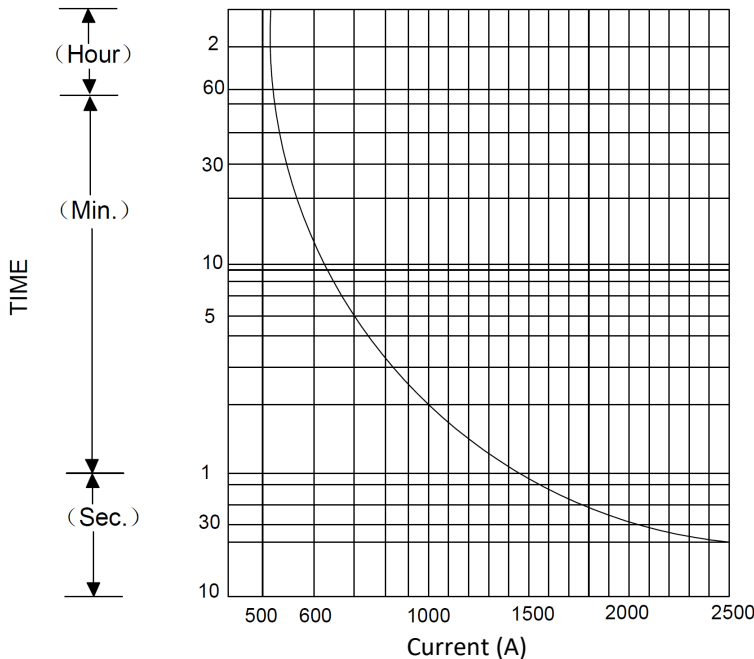

**TABLE 2. RESISTIVE LOAD SWITCHING (MAKE / BREAK DATA)**

VOLTAGE	CURRENT	CYCLES (1 cycle = 1 make + 1 break)
450V	600A	1,000

OPTIONS

TABLE 3. PRODUCT NOMENCLATURE				
REC60	CONTACT POLARITY	MOUNTING	COIL	AUXILIARY CONTACTS
	<b>P</b> Polarity Sensitive	<b>1</b> Bottom Mount	<b>Q</b> 24V integrated economizer	<b>A</b> SPST, Normally Open

PRODUCT DIMENSIONS [mm]

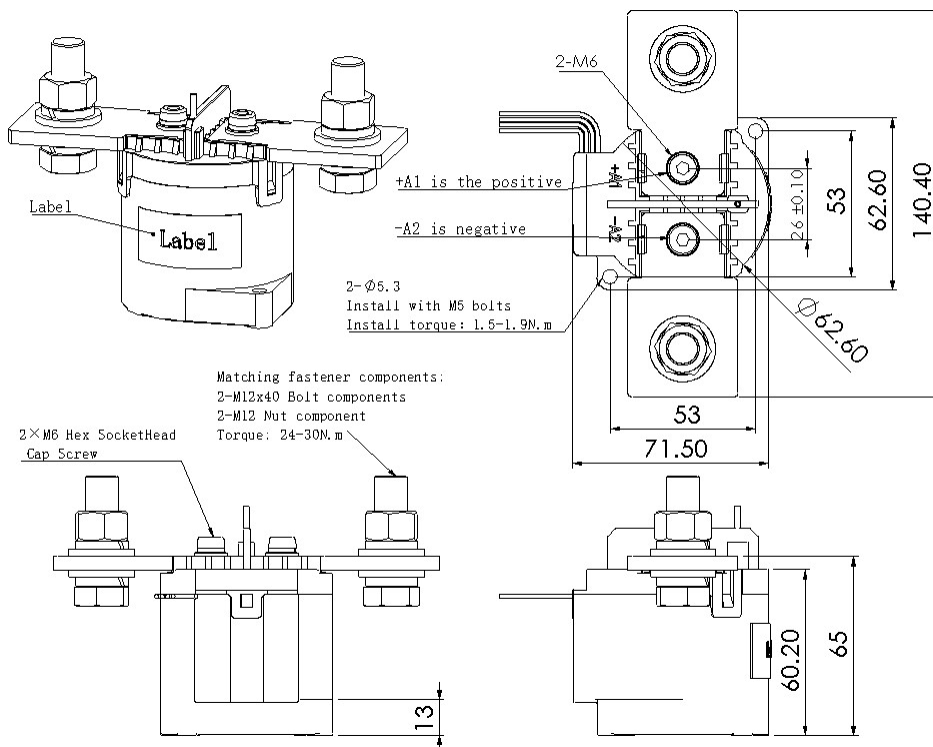


TABLE 4. DIMENSIONAL AND INSTALLATION	
CHARACTERISTIC	MEASURE
Weight	920g (2.1 lb)
Mounting Position	Any / Not Position Sensitive
Package Quantity	TBD
Install Torque	24-30Nm (212-265 in-lb)
M12 Main Terminals	

NOTES

- Polarity Sensitive versions are marked +A1 and -A2 for the power terminals. For applications that require the contactor under load, please ensure current is flowing from the +A1 to the -A2 terminal when breaking/opening under load For Bi-Directional versions the direction of current does not matter when breaking under load
- Attached cables and busbars directly to the main terminal pad using the recommended install torque. Do not use washers or other materials between the contactor and the conductor. This will ensure the lowest possible contact resistance
- Avoid excessive coil voltages. Exceeding the ratings on the datasheet may result in high coil temperature and coil failure
- Contactor may be used above Max Switching Voltage if the application does not require significant load breaking. Please contact Rincon Power to discuss in more detail